TurboDyne Series

ROVER

Self-Powered AM/FM/NOAA Weather Radio
with Flashlight and USB Cell Phone Charger

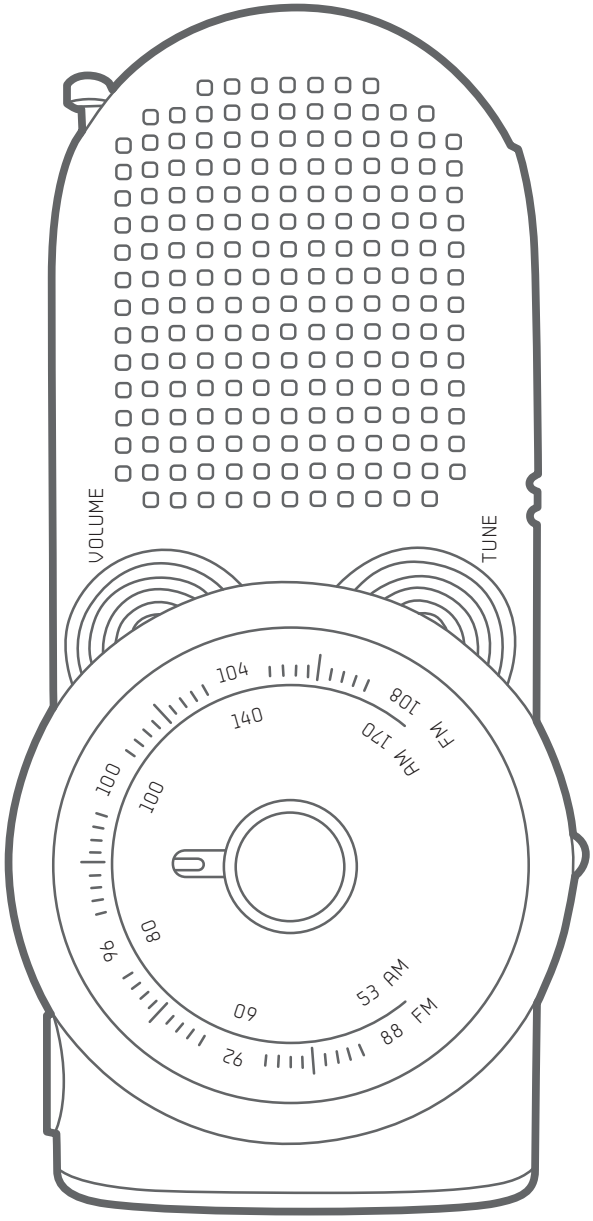

OWNER'S MANUAL

eton
EMPOWERED BY NATURE

DO YOU NEED HELP?

If you need help, please contact us, Monday-Friday, 8:00 a.m.-4:30 p.m., North American Pacific Time. 1-800-872-2228 from the U.S; 1-800-637-1648 from Canada; 650-903-3866, worldwide; FAX: 650-903-3867; web site, www.etoncorp.com; Etón Corporation, 1015 Corporation Way, Palo Alto, CA 94303, USA

WARNING

- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Unplug immediately if liquid has been spilled or if an object has fallen into the apparatus.
- Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.
- Unplug and disconnect external antennas (not included) during lightning storms.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

ENVIRONMENT

Disposal

According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system. Please act according to your local rules and do not dispose of your old products with your normal household waste.

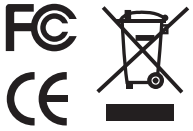

Please dispose of all types of batteries per your Government, State or Local rules and/or regulations. If you are unsure, please call the appropriate local authority to find out how to dispose of them safely and help protect the environment.

FUNCTION KEYS

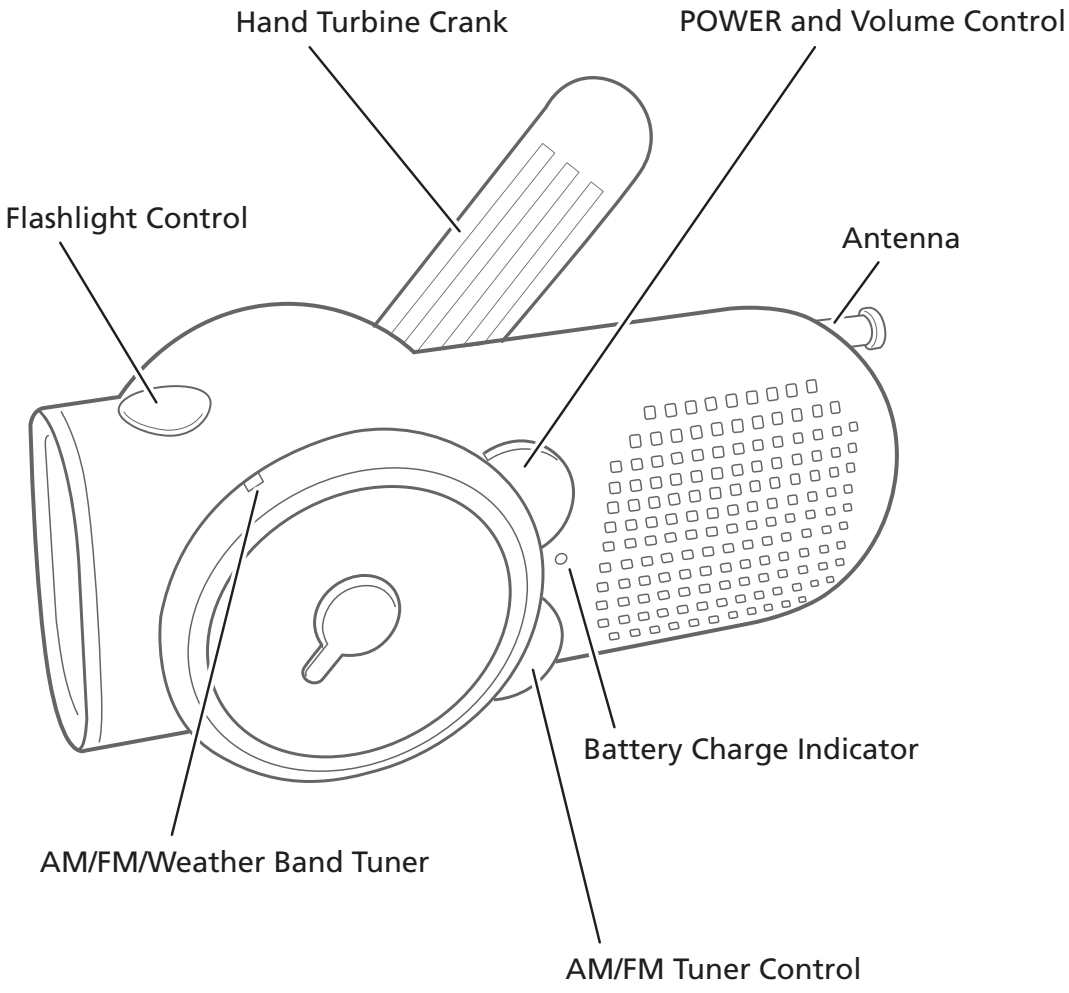

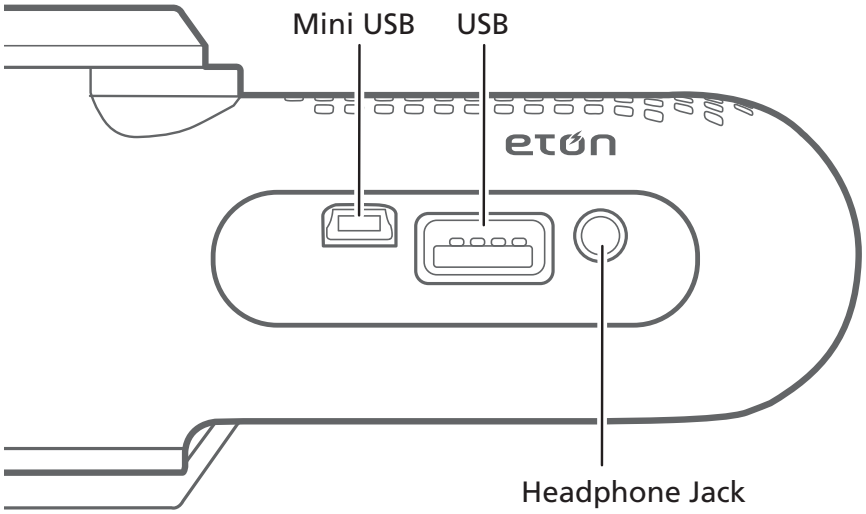

TURNING THE RADIO ON AND OFF

Turn it on and off with the **VOLUME** control. When it's on, the light shines green (front right side of the band selector switch).

ADJUSTING THE VOLUME

Set **VOLUME** control to the desired level.

POWER SOURCES

1. Rechargeable battery pack (Li-Poly battery)
2. USB charging cable

CHARGING THE Li-POLY BATTERY PACK

- Turn the crank for about one minute. The charge indicator light will turn red (located to the right of the band selector dial) when turning the hand crank. This will result in about 15 minutes of low volume play.
- To charge via USB cable, plug the USB cord into a computer (must be turned on) or into an AC adapter with a USB socket (5V, 500mA). Then plug the other end into the mini-USB socket (labeled **DC-IN** under the rubber cover located on the bottom of the radio). While charging, the charge indicator light will turn red, and then change to green when it is fully charged. Once fully charged, the radio will play for about 8 hours, at low volume.

TUNING-IN STATIONS

1. Select **AM**, **FM** or **WB** (weather band) channel 1-7 with the band selector switch. For **FM** and **WB**, fully extend the telescopic antenna for best reception. When listening to **AM** the antenna is not needed because **AM** reception uses an internal ferrite bar antenna.
2. Tune **AM** and **FM** stations with the **TUNE** knob, and tune in **WB** (weather band) with the 7-position switch. In most communities you will hear only one weather station.

WEATHER BAND CHANNELS

Channel 1	162.400 Mhz
Channel 2	162.425 MHz
Channel 3	162.450 Mhz
Channel 4	162.475 MHz
Channel 5	162.500 Mhz
Channel 6	162.525 MHz
Channel 7	162.550 MHz

CELL PHONE CHARGING

To charge the cell phone from the radio's Li-Poly battery, use the cell phone's USB charging cord to connect it to the radio's large USB socket (under the rubber cover on the bottom of the radio).

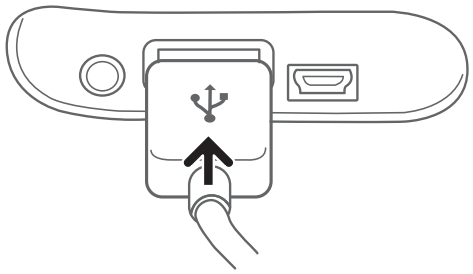

Turn the band selector knob to **CELL**. The indicator light will turn **ON**. The cell phone's battery charging indicator will show that it's charging. When fully charged, it provides 20 minutes of talk time. If internal battery is completely drain, turn the crank for 7 minutes at 130 rpm to charge the cell phone enough to talk for about 5 minutes.



If your cell phone has a USB charging cord, you can use it. If not, you can purchase one from www.iGo.com, or call 1-888-205-0093. To purchase a charging tip and cord for your cell phone, go to www.iGo.com, or call 1-888-205-0093 for USB charging cable model# PS00271-0003. Have the brand and model of your cell phone ready when purchasing a cell phone tip.

USING THE LIGHT

Turn the light on and off with the light switch button, located on top of the unit, near the light.

EARPHONE JACK

Plug in earphones (not included). Sound is heard from both sides in monaural (mono). **Always turn down the volume before using earphones.**

WARRANTY REGISTRATION

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

1. By visiting our website at www.etoncorp.com
2. Mail in enclosed warranty card.
3. Mail your registration card or information to the following address. Include your name, full mailing address, phone number, model purchased, date purchased, retail vendor name and product serial number (typically located in or near the battery compartment):

   Etón Corporation
   1015 Corporation Way
   Palo Alto, CA 94303

LIMITED WARRANTY

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at www.etoncorp.com

SERVICE FOR YOUR PRODUCT

To obtain service for your product, we recommend first contacting an Etón service representative at 1-800-872-2228 (US), 1-800-637-1648 (Canada) or (650) 903-3866 (World-wide) for problem determination and trouble-shooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service.

WARRANTY – If your product is still in warranty and the Etón service representative determines that warranty service is needed, a return authorization will be issued and instructions for shipment to an authorized warranty repair facility. DO NOT ship your radio back without obtaining the return authorization number.

NON-WARRANTY – If your product is no longer under warranty and requires service our technical staff will refer you to the nearest repair facility that will be able to best handle the repair.

For service outside of North America, please refer to the distributor information included at time of purchase or receipt.

EMPOWERED BY NATURE

Etón Corporation
Corporate Headquarters
1015 Corporation Way
Palo Alto, California 94303 USA
tel +1 650-903-3866
tel +1 800-872-2228
fax +1 650-903-3867

Etón Canada
1 Yonge Street, Suite 1801
Toronto, Ontario M5E 1W7 Canada
tel +1 416-214-6885

Designed by Etón Corporation and assembled in China.
© Copyright 2011 Etón Corporation. All rights reserved.

v. 051011

TurboDyne Series

ROVER
QUICK GUIDE

RADIO OPERATION

Hand Turbine Crank
Turn hand crank for immediate charge to the internal battery.

POWER and Volume Control
Turn radio on by using the volume dial. Adjust the volume with the volume dial.

Flashlight Control
Press the flashlight button to turn on/off the built in LED lights.

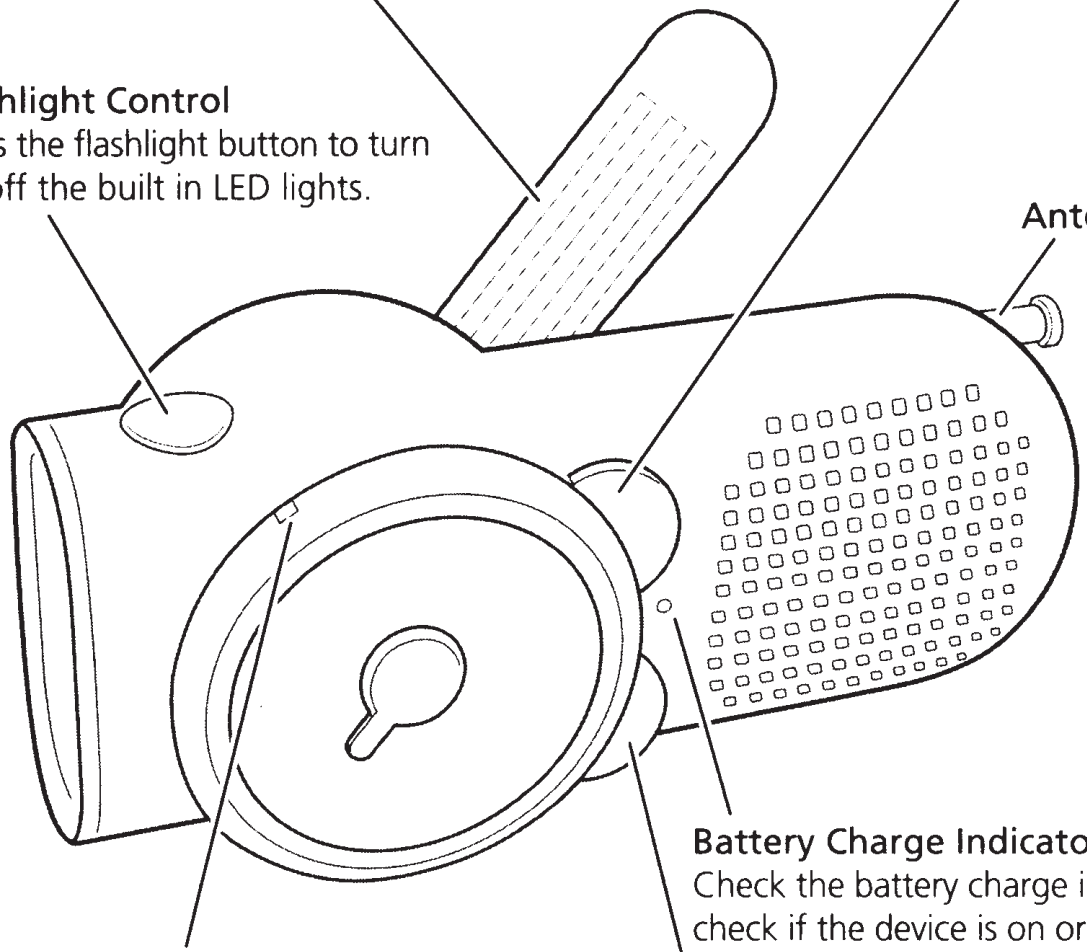

Battery Charge Indicator
Check the battery charge indicator to check if the device is on or charging.

AM/FM/Weather Band Tuner
Use band switch to choose AM, FM or one of the seven Weather bands.

AM/FM Tuner Control
Tune radio dial to desired station.

CELL PHONE CRANK CHARGING

Once the Rover has been fully charged either through the mini USB port (cord included) or by the hand crank, please follow the instructions below for charging your cell phone.

NOTE: With a fully charged unit, 20 minutes of cell phone charging will then allow approximately 20-25 minutes of talk time. It takes approximately 5 hours to fully re-charge the Rover via the mini USB port.

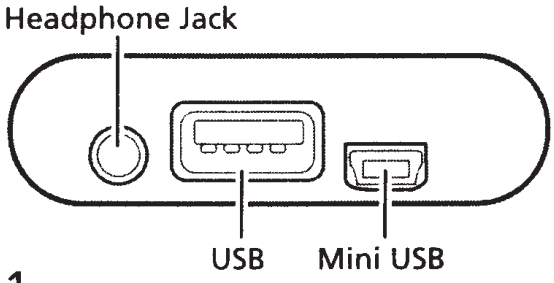

1

Lift the water resistant cover to access USB inputs/outputs and headphone jack.

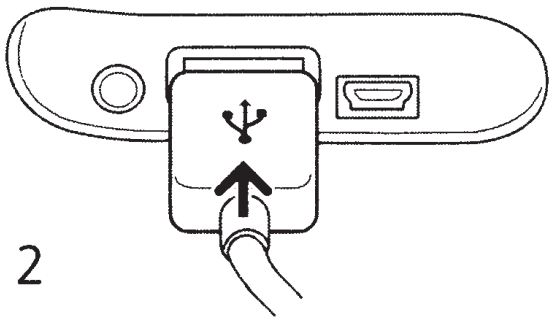

2

Insert USB cord (not included) and connect to your cell phone to begin dump charge.



3

Make sure the **POWER** is shut off. Switch to **CELL** function to directly dump charge power from the device to your cell phone.

WARNING

- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (32 °F to 104 °F).
- Unplug any wires connected to the device immediately if liquid has been spilled or any object has fallen in the apparatus.
- Clean only with a dry cloth. Do not use detergents or chemical solvents as these might damage the finish.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

DISPOSAL

Please dispose of old electrical and electronic equipment according to your local environmental laws and guidelines. Please dispose of all types of batteries per your Government, State or Local rules and/or regulations. If you are unsure, please call the appropriate local authority to find out how to dispose of them safely and help protect the environment.

Standard of Quality

Limited Warranty and Product Registration

USA

Etón Corporation
Corporate Headquarters
1015 Corporation Way
Palo Alto, CA 94303

www.etoncorp.com

Canada

Etón Electronics Canada LTD
Toronto Office
1 Yonge Street, Suite 1801
Toronto, Ontario M5E 1W7

www.etoncorp.com

etón
CORPORATION

www.etoncorp.com
© Copyright 2009 Etón Corporation. All Right Reserved
v 072009

LIMITED WARRANTY

Etón Corporation (Etón) offers a limited warranty to the original customer against manufacturing defects in material and workmanship on this product. This warranty is valid only for the original purchaser and is not transferable.

TWO (2) YEARS PARTS AND LABOR - Europe
ONE (1) YEAR PARTS AND LABOR - North America

This limited warranty begins on the original date of purchase, and is valid only on products purchased through an authorized Etón retailer. Warranty repairs must be performed by Eton or an authorized service center. To receive warranty service, the original dated bill of sale, or a copy, must be presented upon request as proof of purchase. Installation, removal or reinstallation of the product is not included under this warranty. Shipping to Etón or the authorized service center is the responsibility of the purchaser. For products purchased in Europe, please return to your dealer or the distributor of your country, which is listed on a sheet included in the packaging.

Etón will repair or replace this product, at our option and at no charge, with new or reconditioned parts if this product is found to be defective during the limited warranty period. To be eligible for warranty coverage, the product must be returned with shipping charges prepaid no later than 15 days after the expiration of the warranty period to Etón or the designated service center. Prior to returning any product for warranty service, the purchaser must contact Etón or the designated service center for troubleshooting and service procedure instructions. Damaged parts or products become the property of Etón. Parts and products replaced by Etón assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in material and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage that occurs due to applications and uses for which the product was not intended; failures or problems that are caused by products or equipment not supplied by Etón; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning, or other acts of nature; incorrect line voltage, fluctuations, or surges; damage caused by improper or faulty installation; damage caused by acid leakage from improperly installed or defective batteries; product alteration or modification; or use of unauthorized parts, supplies, accessories, or equipment that damage this product or result in service problems.

SERVICE INFORMATION

To obtain service for your Etón product, first contact an Etón service representative at 1-800-872-2228 US, 1-800-637-1648 Canada or your respective country distributor in Europe (see enclosed list) for troubleshooting. Many common questions and problems can be resolved over the phone.

WARRANTY REGISTRATION

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

1. By visiting our website at **http://www.etoncorp.com.**
2. Mail in enclosed warranty card.
3. Mail your registration card or information to following address; include your name, full mailing address, phone number, email address, model purchased, date purchased, retail vendor name:

Etón Corporation
1015 Corporation Way
Palo Alto, CA 94303 USA

LIMITED WARRANTY

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at **www.etoncorp.com.**

SERVICE FOR YOUR PRODUCT

To obtain service for your product, we recommend first contacting an Etón service representative at: 1-800-872-2228 US, 1-800-637-1648 Canada, (650) 903-3866 or **customersvc@etoncorp.com** for problem determination and trouble-shooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service.

WARRANTY – If your product is still in warranty and the Etón service representative determines warranty service is needed, a return authorization will be issued and instructions will be given. DO NOT ship your radio back without obtaining the return authorization.

NON-WARRANTY – If your product is no longer under warranty and requires service, the Etón service representative will refer you to the nearest repair facility that will best handle the repair.

For service outside North America, please refer to the distributor information included at time of purchase/receipt.

*Denotes Required Field

Etón Product Registration

Go to: **www.etoncorp.com/productregistration**, or mail this form today.

Serial number*:
(located in the back of the unit)

Date of purchase*:

Dealers name*:

City*:

Country/Territory*:

Name*:

Address*:

City*:

State/Provice*:

Postal Code/ZIP Code*:

Country/Territory*:

Telephone Number*:

Email*:

1. Your annual income?

- ○ Under $14,999
- ○ $15,000 to $30,000
- ○ $30,001 to $50,000
- ○ $50,001 to $75,000
- ○ $75,001 to $150,000
- ○ Over $150,001

2. Your age?

- ○ Under 16
- ○ 16-20
- ○ 21-25
- ○ 26-30
- ○ 31-35
- ○ 36-40
- ○ 41-45
- ○ 46-50
- ○ 51-55
- ○ 56-60
- ○ 61 and over

3. What are your listening interests? (Check all that apply)

- ○ Satellite Radio
- ○ Local AM/FM
- ○ Shortwave/International Broadcast

4. Did you consider another unit before choosing this product?

- ○ Yes (Please Specify Model): _____
- ○ No

5. What is your occupation? _____

6. How did you hear about Etón?

- ○ Newspaper ad
- ○ Radio ad
- ○ Through a retailer
- ○ Article
- ○ Web Search
- ○ Other _____

○ **Yes!** I would like Etón to send me information on products including special offers, new product launches, and product updates/information:

○ Email ○ Mail

ETÓN
CORPORATION
www.etoncorp.com